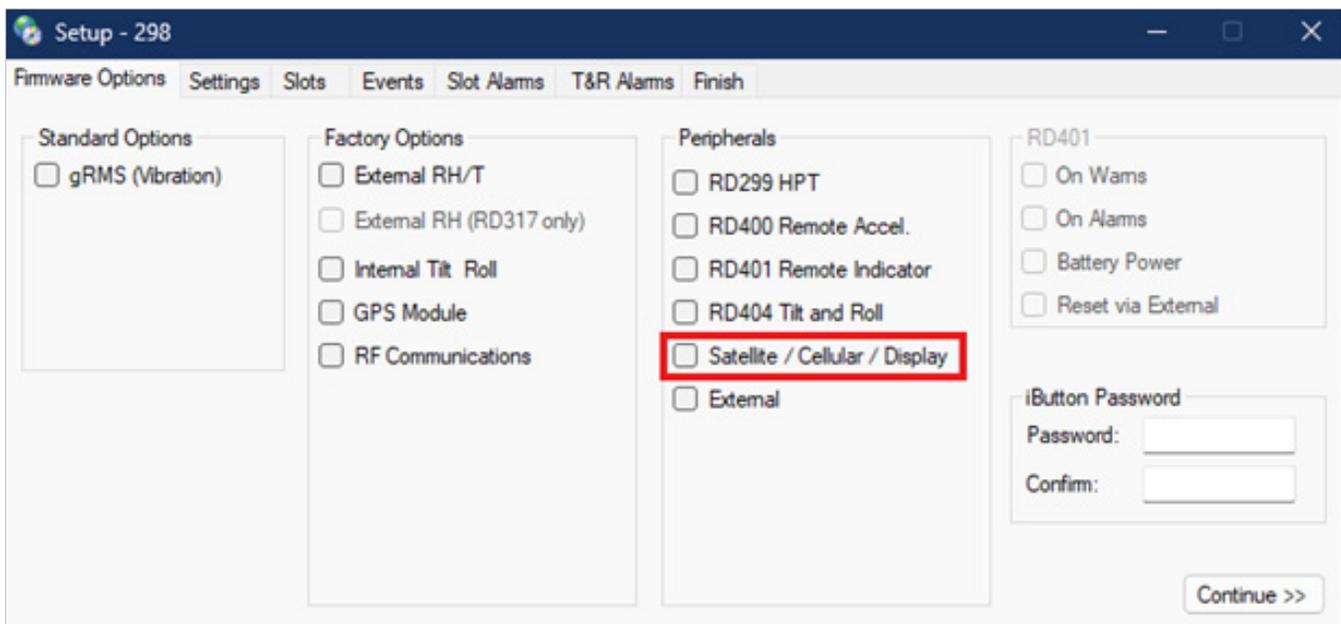


## ShockLog® Cellular GL 快速入门指南

ShockLog Cellular GL 模块可与 ShockLog 298 配合使用，使用户能够通过 SpotSee Cloud 跟踪资产并监控冲击水平和其他环境条件。该模块可与任何固件版本为 30 或更高版本的 ShockLog 298 设备配合使用。

### ShockLog 设置

在将 ShockLog Cellular GL 模块与 ShockLog 298 配对时，用户必须在 ShockLog 设置软件的“Firmware Options”（固件选项）页面上选择“卫星/蜂窝”选项。这将在记录仪和蜂窝模块之间建立通信链路。



## ShockLog® Cellular GL 快速入门指南

### SpotSee Cloud

SpotSee Cloud 允许用户随时随地访问货运信息。通过登录 [track.spotsee.io](https://track.spotsee.io), 用户可以查看行程信息、警报状态和资产位置。

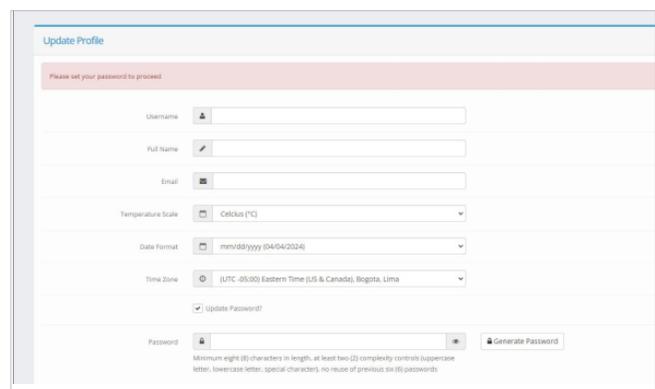
### 访问云平台

每台设备出厂时均附带一张包含其“Registration Token”（注册令牌）的卡片。用户可扫描二维码或点击链接注册新设备。



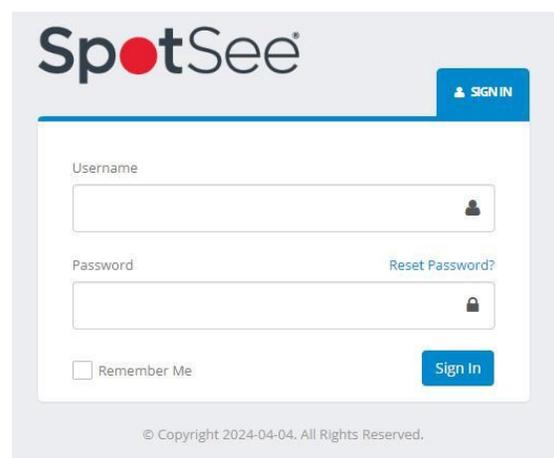
### 新用户设置

系统将提示新用户设置用户名和密码，并定义一些基本偏好设置。

A screenshot of the "Update Profile" form in the SpotSee application. The form includes fields for Username, Full Name, and Email. It also has dropdown menus for Temperature Scale (set to Celsius (°C)), Date Format (set to mm/dd/yyyy (04/04/2024)), and Time Zone (set to UTC -05:00 Eastern Time (US & Canada), Bogota, Lima). There is a checkbox for "Update Password?" which is checked. Below the password field, there is a "Generate Password" button and a note: "Minimum eight (8) characters in length, at least two (2) complexity controls (uppercase letter, lowercase letter, special character, no reuse of previous six (6) passwords)".

### 已有用户登录

创建用户名和密码后，用户可访问 [track.spotsee.io](https://track.spotsee.io) 并登录。

A screenshot of the SpotSee Sign In screen. It features the SpotSee logo at the top left and a "SIGN IN" button at the top right. The main form has fields for Username and Password. There is a "Reset Password?" link next to the password field. Below the password field is a "Remember Me" checkbox and a "Sign In" button. At the bottom, there is a copyright notice: "© Copyright 2024-04-04. All Rights Reserved."

### 如有疑问或故障排除，请联系技术支持：

电子邮件: [techsupport@spotsee.io](mailto:techsupport@spotsee.io)

SpotSee 加拿大和美洲：

美国: +1 800-466-0101 | 美国以外地区: +1 214-736-4579

SpotSee 欧洲、中东、非洲: +31.55.7370 148

SpotSee 亚太地区: +86 (21) 6627 6008